



SELV



Introduction

The KNX Power Supply KNX-20E-640 is a 640mA power supply with high efficiency and a small footprint of only 3SU (52.5mm). The device has a KNX bus choke output and an additional output for ancillary power. The $-5^{\circ}\text{C} \sim +50^{\circ}\text{C}$ wide temperature operating range can meet all kinds of applications. LED indicators are used in case of normal operation, overload conditions and RESET operation. It is perfectly suitable to power up any products labeled with the KNX trademark.

Features

EIB/KNX power supply with integrated choke

Compact size with 3US (52.5mm) width

Safety extra low voltage (SELV)

180 ~ 264Vac input

No load power consumption < 0.5W

200ms mains failure back-up time

Protections: Short circuit/ Overload (short-circuit-proof)/ Over voltage

Cooling by free air convection

Isolation class I


LED indicator for normal operation, bus reset and bus overload

Installed on DIN TS-35/7.5 or 15

3 years warranty

Display

The device is equipped with a reset push button, three LEDs and terminal blocks for the AC, KNX bus line and ancillary output.

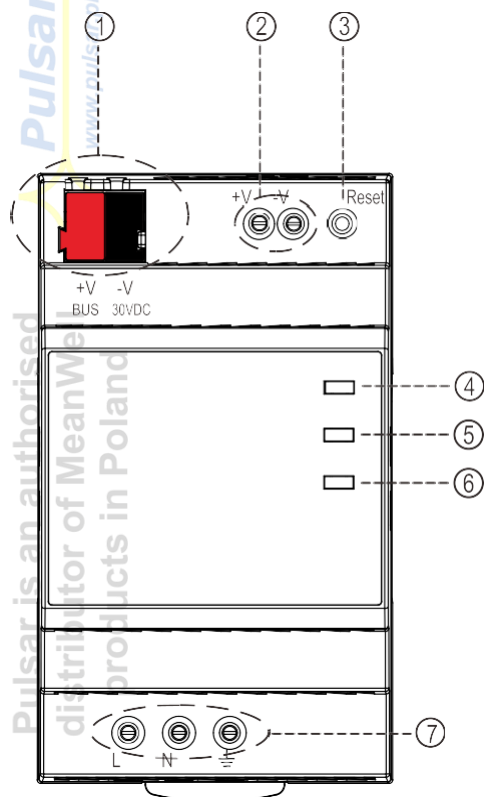

| | |
|---|---|
| 1 | KNX bus terminal (Red : BUS +V, Black : BUS -V) |
| 2 | Ancillary power terminal |
| 3 | RESET button |
| 4 | Power ON (Green) |
| 5 | Reset (Red) |
| 6 | $I > I_{\max}$ (Red) |
| 7 | AC terminal (L, N, \perp) |

Installation

1. Wiring

Use wires with an adequate cross-section

Use suitable mounting tools to do the wiring and mounting

The maximum number of bus devices connected is 64

The maximum length of a line segment is 350 m, measured along the line between the power supply and the furthest bus device


The maximum distance between two bus devices cannot exceed 700 m

The maximum length of a bus line is 1000 m, keeping into account all segments


| Type | AC and ancillary power terminals (L, N, \perp , +V, -V) | KNX bus terminal (BUS +V, BUS -V) |
|-------------------------------|--|--------------------------------------|
| Solid wire | 0.5 ~ 4.0mm | 0.6 ~ 0.8 Φ |
| Stranded wire | 0.5 ~ 2.5mm ² | ----- |
| American wire gauge | 12 ~ 26AWG | 20 ~ 22AWG |
| Wire stripping length | 6.5mm (0.255") | 5mm (0.196") |
| Screwdriver | 3mm Slotted | ----- |
| Recommended tightening torque | 8 kgf-cm (7 lb-in) | ----- |

2. Mounting and Connection


a. Insert the power supply onto the DIN rail (TS35/7.5 or TS35/15).

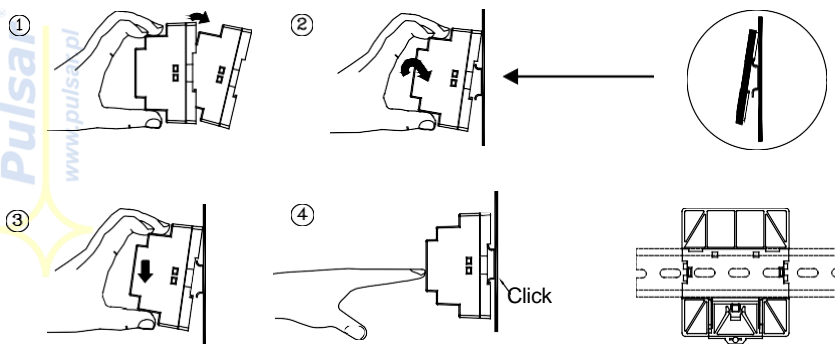

b. Connect the KNX, the connection to the KNX bus line is made with the terminal block (red: BUS +V/ black: BUS -V) located on the left upper part of the front.

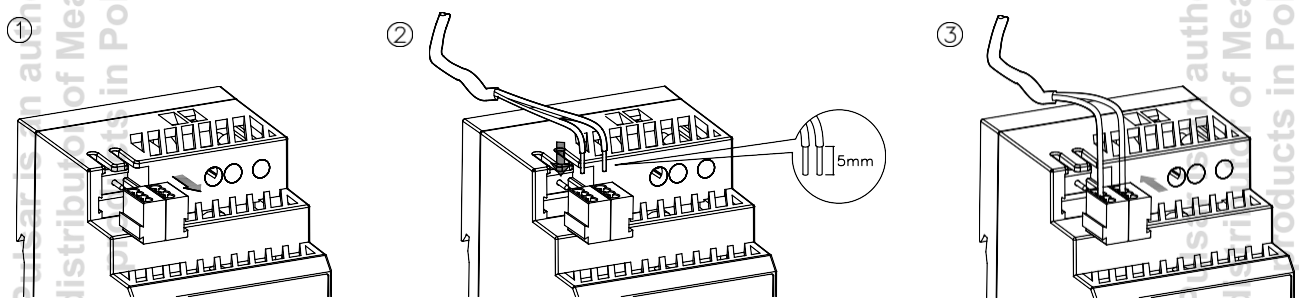

c. Connect the mains voltage, the connection to the AC is made with the terminal (L, N, \perp) located on the bottom.

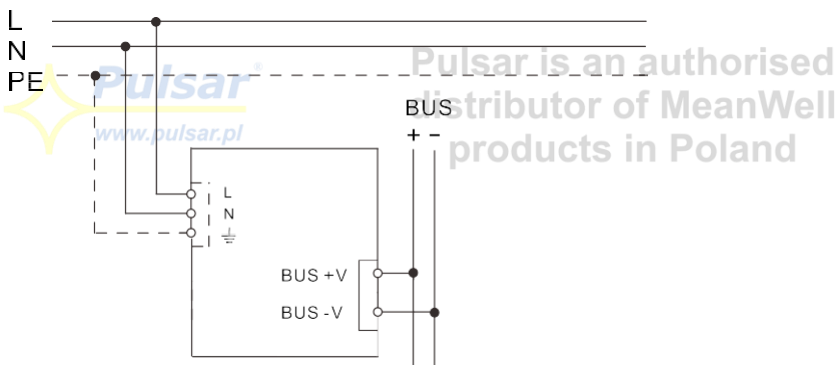

3. MCB

Use a MCB (miniature circuit breaker) with an adequate current rating to protect the KNX device.

| Model | B10 | B16 | C10 | C16 |
|-------------|-----|-----|-----|-----|
| KNX-20E-640 | 1 | 2 | 2 | 4 |

Note: These calculated values are based on MCB S201 series manufactured by ABB.

Function and Operation

The device does not require any configuration with ETS® (Engineering Tool Software) tool. Once the wiring is proper done, the "Power on" LED will light up and the rest of the LEDs remain off to indicate that the unit is in operation condition.

Reset : To carry out a reset, press the RESET button for at least 20 seconds to reset the KNX power supply.

Fault : If the red LED ($I > I_{max}$) lights up with applied mains voltage, a fault is present. This means that the KNX output is overloaded or short-circuited. The problem can be solved by removing the cause of the short circuit or by reducing the number of KNX devices connected to the line. Once the fault has been rectified, carry out a reset by pressing the RESET button for approx. 20 seconds.

Meaning of the LEDs

| Power ON (GREEN) | Reset (RED) | $I > I_{max}$ (RED) | Status |
|------------------|-------------|---------------------|---|
| ON | OFF | OFF | Ready for operation or working normally |
| OFF | ON | OFF | Resetting |
| ON | OFF | ON | Output current too high |
| OFF | OFF | ON | Short-circuit or bus reverse polarity |
| OFF | OFF | OFF | No mains voltage |

Environmental Limitations

Maximum ambient temperature must not exceed 50°C

Always allow adequate ventilation clearances, 5mm left and right, 40mm above and 20mm below, around the unit in use to prevent it from overheating

Only install the unit in indoor environments

Cautions

This unit must be installed by a qualified electrician

It should be ensured that the supply can be isolated when connecting the unit.

Environmental declaration information

https://www.meanwell.com/Upload/PDF/RoHS_PFOS.pdf

https://www.meanwell.com/Upload/PDF/REACH_SVHC.pdf

https://www.meanwell.com/Upload/PDF/Declaration_RoHS-E.pdf