

## OZB4 v1.0 Pole mount bracket OZB4









Version: 1 from 10.03.2020 Replaces version: ------




Fig. 1 The view of the package content.

## Application.

Pole mount bracket is designed for mounting hermetic enclosures on poles, masts, structural elements, etc. in a way that does not damage the structure of the bearing element.

The mounting procedure involves placing (tightening) a metal clamp around the bearing element.

Mounting plate dimensions	220 x 300 [-/+ 2mm]
The length of the metal clamp	2m
The width of the metal clamp	15mm
Cotter pins	2 pcs
Locking handle	2 pcs
Additional equipment	Self-tapping screw - 4pcs
Operating conditions	-25°C÷50°C
Net/gross weight	0,65kg / 0,65kg

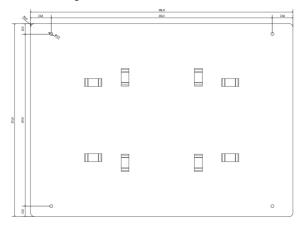

## Mounting method.

- 1. Screw the flat side of the mounting plate to the rear side of the enclosure using the screws included (see Fig. 1).
- 2. Cut the metal clamp to the desired length, in order to tighten it around the bearing element on which the enclosure will be mounted; leaving some allowance so that the metal clamp can be fastened with the included cotter pin (Fig. 2).
- 3. Repeat for the second pair of knockouts.
- 4. Pass the adjusted clamps through knockouts in the mounting plate, choosing the appropriate (vertical or horizontal) installation position.
- 5. To tighten the clamps, insert them into the cotter pins; then, turn cotter pins with clamps inside locking handles until the clamps are tight (according to Fig. 2).

Fig. 2







## Pulsar sp. j.

Siedlec 150, 32-744 Łapczyca, Poland Phone (+48) 14-610-19-40, Fax (+48) 14-610-19-50

E-mail: <a href="mailto:biuro@pulsar.pl">biuro@pulsar.pl</a>, <a href="mailto:sales@pulsar.pl">sales@pulsar.pl</a>, <a href="mailto:biuro@pulsar.pl">biuro@pulsar.pl</a>, <a href="mailto:sales@pulsar.pl">sales@pulsar.pl</a>, <a href="mailto:biuro@pulsar.pl">biuro@pulsar.pl</a>, <a href="mailto:sales@pulsar.pl">www.zasilacze.pl</a>