

# PSD520300 v1.0 PSD 52V/3A Desktop type power supply for CCTV

# 

Edition: 1 from 13.11.2024 Supercedes the edition: ------

EN

# Features of the power supply unit:

- power output 3 A/52 V DC<sup>\*</sup>
- universal AC input voltage range ~100-240 V
- Built-in power factor correction (PFC)
- high efficiency (to 93%)
- LED optical signalisation
- standby power <0,2 W</li>

- efficiency level: VI
- protections:
  - SCP short-circuit protection
  - overvoltage protection (AC input)
  - OLP overload
- warranty 2 years


# 1. Technical description.


### 1.3. General description.

The power supply is intended for supply cameras that require stabilised voltage of **52 V DC**. The unit has a cable with a DC5.5/2.1 plug. The power supply unit is protected against short-circuit, overload and overvoltage.


Supply voltage	~100-240 V; 50/60 Hz
Current consumption	1,6 A
Supply power	160 W max.
Efficiency (average)	93%
Efficiency (10% load)	90%
Power factor PF	>0,95
Output voltage	52 V DC
Output current t <sub>AMB</sub> <30°C	3 A - refer to graph 1.
Output current tAMB=40°C	2,1 A - refer to graph 1.
Ripple voltage	250mV p-p max.
Short-circuit protection SCP	electronic, automatic recovery
Overload protection OLP	110-150% of power supply, automatic recovery
Optical signalisation	LED – presence of DC voltage
Operation conditions	Temperature: -10°C ÷ +40°C relative humidity 20%90%, without condensation
Dimensions (LxWxH)	162 x 62 x 34 [mm]
Net/gross weight	0,68 / 0,75 [kg]
Protection class EN 62368-1	II (second)
Lenght of DC cable	1,5m + plug DC5,5/2,1 female
Lenght of AC cable	1,5m + mains plug
Storage temperature	-20°C+60°C
Declaration, warranty	CE, 2 years

\* In order to extend the life of the power supply, the load current of 2,1 A is recommended.

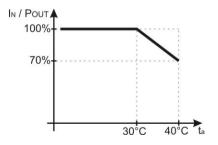

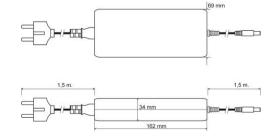

Graph 1. Relation between output current and ambient temperature (instantaneous load).



<sup>\*</sup> Refer to graph 1

#### 1.3. Accessories.

For power supplies are available accessories - fuse blocks and cable adapter. For details -visit www.pulsar.pl.

#### 2. Installation.

#### 2.1. Requirements.

The power supply shall be mounted by the qualified installer having appropriate (required and necessary for a given country) permissions and qualifications for connecting (operating) low-voltage installations. The power supply shall be mounted in closed rooms of the normal air humidity (RH=90% max. without condensation) and the temperature within the range from -10°C to +40°C. The power supply shall be mounted in a close casing (a cubicle, a terminal device) and in order to fulfill LVD and EMC requirements the rules for power supplies, encasing and shielding shall be observed according to application.

#### 2.2. Installation procedure.

- 1. Connect the DC output to the load/loads.
- 2. Connect the power supply unit to the ~230 V line. The power supply has to be installed in such way to keep the air flow around the supply unit.
- 3. After tests and operation control are performed, the casing (cubicle) shall be closed etc.

#### 3. Maintenance.

Any and all maintenance operations may be performed following the disconnection of the power supply from the power network. The power supply does not require any specific maintenance procedures, however, in the case of significant level of dust, it should be cleaned with the compressed air.

