Pulsar

EN**

Pulsar

CODE: TYPE: EN54-7A40 v.1.1/VIII EN54 27,6V/7A/2x40Ah power supply unit for fire alarm systems

RED POWER



Power supply unit for fire systems used in building industry. Declared performance: Fire safety. Certificate of constancy of performance: 1438-CPR-0385 Certificate of admittance: 3724/2019 Conformity: EN 54-4:1997+AC:1999+A1:2002+A2:2006 EN 12101-10:2005+AC:2007

W.

Θ







D,

"This product is suitable for the systems designed in compliance with the standards EN 54-4 and EN 12101-10"

Requirements	Requirements according to standards	PSU EN54-7A40
External Power Supply failure indication	YES	YES
Two independent power supply outputs protected against short-circuit	YES	YES
Temperature-compensated battery charging	YES	YES
Measurement of the resistance of the battery circuit	YES	YES
Low battery indication	YES	YES
Deep discharge battery protection	YES	YES
Protection against short-circuit of the battery terminals	YES	YES
Blown battery fuse indication	YES	YES
Charging circuit failure indication	YES	YES
Low output voltage indication	YES	YES
High output voltage indication	YES	YES
Indication of power supply failure	YES	YES
Overvoltage protection	YES	YES
Short-circuit protection	YES	YES
Overload protection	YES	YES
Output of collective failure ALARM	YES	YES
EPS technical output	YES	YES
APS technical output	YES	YES
PSU technical output	-	YES
Input of an external failure indication EXTi	-	YES
Controlled relay output EXTo	-	YES
Remote battery test	-	YES
~230 V mains supply voltage measurement	-	YES
LED optical indication	-	YES
Tamper indicating enclosure opening	-	YES



PSU features:

- In accordance with standards: EN 54-4:1997+AC:1999+A1:2002+A2:2006, EN 12101-10:2005+AC:2007
- 27,6 V DC/ 7 A uninterruptible power supply
- battery housing for two 40 Ah/12 V batteries
- independently protected outputs AUX1 and AUX2
- high efficiency 82%
- low level of voltage ripple
- microprocessor-based automation system
- intelligent PSU overload protection
- · measurement of the resistance of the battery circuit
- automatic temperature-compensated charging
- battery test
- two-stage battery charging process
- accelerated battery charging
- monitoring of the continuity of the battery circuit
- monitoring of the battery voltage
- · monitoring of the battery fuse
- monitoring of charging and maintenance of the batteries
- deep discharge battery protection (UVP)
- battery overcharge protection
- battery output protection against short-circuit and reverse connection
- monitoring of the load current
- output voltage control
- fuse monitoring of AUX1and AUX2 outputs
- ~230 V mains supply voltage measurement
- "SERIAL" communication port with implemented MODBUS RTU protocol
- Power Security" is a free application for remote monitoring of power supplies (for PC and Android Phones)

- remote monitoring (options: Ethernet, RS485)
- remote battery test (additional modules required)
- cooperation with optional EN54-LB4 or EN54-LB8 fuse modules
- optical indication of PSU overload OVL
- acoustic indication of failure
- adjustable delay for ~230 V power loss indication
- relay output of collective failure ALARM
- input of collective failure EXTi
- controlled relay output EXTo
- technical inputs/outputs with galvanic isolation
- EPS technical output indicating ~230 V power loss
- PSU technical output indicating PSU failure
- · APS technical output indicating battery failure
- internal memory of PSU operating status
- optical indication LED panel
 - output current readings
 - output voltage readings: AUX1, AUX2
 - resistance of the battery circuit
 - ~230 V mains voltage readings
 - failure codes with history
- protections:
 - SCP short-circuit protection
 - OLP overload protection
 - OHP overheat protection
 - OVP overvoltage protection
 - Surge protection
 - Antisabotage protection Tamper
- closing the enclosure lock
- convection cooling
- warranty 5 years from the production date

General description

The buffer power supply has been designed for an uninterrupted supply of fire alarm systems, smoke and heat control systems, fire protection equipment and fire automatics requiring stabilized voltage of 24 V DC (± 15%). The PSU is fitted with two independently protected outputs AUX1 and AUX2, which supply voltage of **27,6 V DC** with a total output current:

Continuous operation Output current Imax a=5 A

Instantaneous operation Output current Imax b=7 A

In case of power loss, the PSU switches to battery power, providing uninterruptible power supply. The PSU is enclosed in a metal casing (RAL 3001 - red) with battery housing for two 40 Ah/12 V batteries. The PSU works with maintenance-free lead acid batteries made with AGM technology or gel technology.


EN54/LED series power supply unit Power supply for fire alarm systems 27,6 V DC



Functional class EN 12101-10:2007	A
Mains supply	~230 V
Current consumption	1.36 A
Power frequency	50 Hz
PSU's power	193 W
Efficiency	82%
Output voltage at 20 °C	
. •	22,0 V÷ 27,6 V DC – buffer operation 20,0 V÷ 27,6 V DC – battery-assisted operation
Output current	Continuous operation: Imax a=5 A Instantaneous operation: Imax b=7 A
Maximal resistance of the battery circuit	300m Ohm
Ripple voltage	100mV p-p max.
Current consumption by the PSU during battery-assisted operation	I = 78mA Caution ! If the power supply is connected with the communication interface or fuse module, additional current consumption should be considered.
Battery charging current	2 A
Coefficient of temperature compensation of the	
battery voltage	-40mV/ °C (-5 °C ÷ 40 °C)
Low battery voltage indication	Ubat < 23 V, during battery mode
	U>30,5 V, disconnection of the output voltage (AUX+ disconnection), automatic
Overvoltage protection OVP	return
Short-circuit protection SCP	F8 A – current limit, F _{AUX} melting fuse (failure requires fuse replacement)
Overload protection OLP	Hardware - Software
Battery circuit protection SCP and reverse	
polarity connection	F10 A- current limit, F _{BAT} melting fuse (failure requires fuse replacement)
Deep discharge battery protection UVP	U<20 V (± 2%) – disconnection (+BAT) of the batteries,
TAMPER output indicating enclosure opening	Microswitch TAMPER
Technical outputs:	- type – electronic, max 50mA/30 V DC, galvanic isolation 1500 V _{RMS}
- EPS FLT; indicating AC power failure	- delay time approximately 10s/1m/10m/30m (+/-5%) – configured from the LED
	panel
 APS FLT; indicating battery failure PSU FLT; indicating PSU failure 	- type – electronic, max 50mA/30 V DC, galvanic isolation 1500 V_{RMS}
- ALARM; indicating collective failure	
- ALARM, Indicating collective failure	- type – relay: 1 A@ 30 V DC/50 V AC
	CAUTION! In Fig.2 the set of contacts shows a potential-free status of the relay,
	which corresponds to power supply failure. Voltage "ON" – 10+30 V DC
EXTi technical input	Voltage "OFF" – 10+30 V DC
	Level of galvanic isolation 1500 V _{RMS}
EXTo relay output	1 A@ 30 V DC /50 V AC
ExTo Telay output	- LEDs on the PCB of the power supply unit,
	- LED son the PCB of the power supply unit,
	output current readings
Optical indication:	
Optical indication:	 output voltage readings: AUX1, AUX2
	resistance of the battery circuit
	mains supply voltage filling and picture
Assuratio indication:	failure codes and history
Acoustic indication:	- piezoelectric indicator ~75dB /0,3m
Fuses:	
- F _{MAINS}	T 6,3 A / 250 V F 10 A / 250 V
- Еват	F 8 A / 250 V
- F _{AUX1} - F _{AUX2}	F 8 A / 250 V
	- RS485 "INTR" interface; RS485 communication
Additional equipment	- Ethernet "INTE" interface; Ethernet communication
(not included)	- RS485-Ethernet "INTRE" interface; RS485-Ethernet communication
Operating conditions	2nd environmental class (EN12101-10:2007), -5 °C+75 °C
Enclosure	Steel plate DC01 1,2mm, color: RAL 3001 (red)
Enclosure dimensions	W=420 H=420 D+D ₁ =182 + 8 [+/- 2mm]
	$W_{1}=425 H_{1}=425 [+/- 2mm]$
Net/gross weight	10,9/12,2 kg
Fitting battery	2x40 Ah/12 V (SLA) max. 400 x 180 x 175mm (WxHxD) max H↑ ₩
Closing	D
Closing	Key lock
Certificates, declarations, warranty	Certificate of constancy of performance CNBOP-PIB, Certificate of approval CNBOP-PIB, CE. BoHS, 5 years from the production date
	CE, RoHS, 5 years from the production date The enclosure does not adjoin the mounting surface so that cables can be led.
Notes	Convection cooling.

Pulsar

Parameters remote control system. (additional modules required)

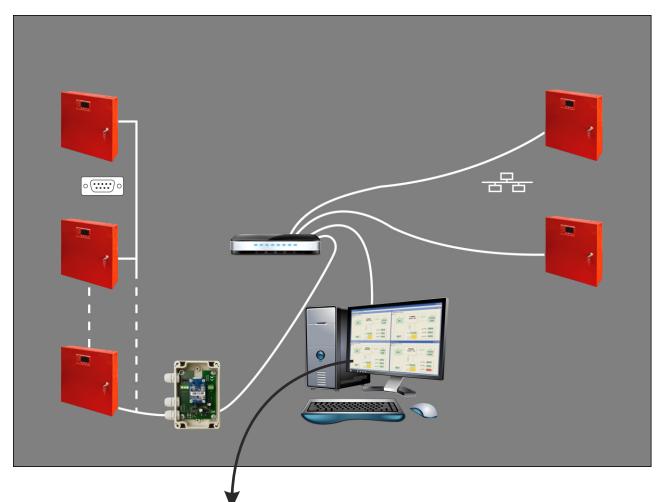

PowerSecurity				
Power Supplies Window	is Language Help			
Areal	O PSU1		O PSU2	
- O P9.12	Preview Charts History		Preview Charts History	
Area2	Q 107		Q 18	
- © PSU4	RED POWE			RED POWER
	AC EN54	FAUX1 AUX	AC	EN54 AUX
	228V 27,6V / 3A	1 27 61/	228V	27,6V / 5A 1 27,6V
	E220V FBAT	1 27,6V	E E BAT	
		2 27,5V		2 27,6V
		Σ 2,6A		Σ <u>3,1A</u>
		2 2,0A		2 3, TA
	BAT		BAT	
		500		
		O EPS	∪ 27,6V	EXTO EPS
	T 26°C on	PSU	T 26°C	on PSU
	R 0,12Ω ΕΧΤ	i APS	R 0,12Ω	
	R 0,12Ω EXT	I APS	K0, 12Ω	EXTI APS
	TEST TAMPE	R Alarm	TEST	TAMPER Alarm
	© PSU3		© PSU4	
	Preview Charts History		Preview Charts History	
	Preview Charts History			
	Preview Charts History	R	Preview Charts History	RED POWER
	Preview (charts History		Preview Charts History	RED POWER
	AC EN54	R Fauxt AUX	Charts History	RED POWER EN54 - AUX
	Preview (charts History	R FAUX1 FAUX2 1 27,6V	Preview Charts History	EN54 27,6V / 7A Faux Faux Faux Faux 1 0,0V
	RED POWE RED POWE AC EN54 229V 27,6V / 2A	R FAUX1 1 27 6V	Preview Charts Heldory	EN54 27.5V / 7A
	RED POWE RED POWE AC EN54 229V 27,6V / 2A	R FAUX1 FAUX2 1 27,6V 2 27,6V	Preview Charts Heldory	EN54 Fairst AUX 27,6V / 7A 1 0,0V 2 27,5V 2
	RED POWE RED POWE AC EN54 229V 27,6V / 2A	R FAUX1 FAUX2 1 27,6V	Preter Courts Hotory	EN54 27,6V / 7A Faux Faux Faux Faux 1 0,0V
	RED POWE RED POWE AC EN54 229V 27,6V / 2A	R FAUX1 FAUX2 1 27,6V 2 27,6V	Preview Charts Heldory	EN54 Fairst AUX 27,6V / 7A 1 0,0V 2 27,5V 2
	AC EN54 229V Funt BAT BAT	R FAUX1 1 27,6V 2 27,6V 2 27,6V 2 1,8A	Preter Courts (Hotory) Th AC 230V FBAT BAT	EN54 Faust 27,6V / 7A 4UX 227,5V 227,5V 23,2A 3,2A
	AC EN54 229V FBAT BAT 27,6V U 27,6V	R FAUX1 FAUX2 2 27,6V 2 27,6V 2 1,8A 0 EPS	Preme Courts (Hotory) Th AC 230V FBAT BAT U 27,7V	EN54 FAUX 27,6V / 7A 1 0,0V 2 27,5V 2 2 3,2A 3,2A
	AC EN54 229V Funt BAT BAT	R FAUX1 1 27,6V 2 27,6V 2 27,6V 2 1,8A	Preter Courts (Hotory) Th AC 230V FBAT BAT	EN54 Faust 27,6V / 7A 4UX 227,5V 227,5V 23,2A 3,2A
	AC EN54 229V FEAT BAT 27,6V V 27,6V T 26°C On 0	R FAUX1 FAUX2 2 27,6V 2 27,6V 2 27,6V 2 1,8A 0 - EPS - PSU	Preme Courts (Hotory) Th AC 230V FBAT BAT U 27,7V	EN54 Farmer 27,6V / 7A 1 0,0V 2 27,5V 2 2 3,2A 3,2A
	BAT C TRO EN54 U 27,6V C NC EXT U 27,6V C NC EXT T 26°C On EXT EXT	R FAIXT FAIXT FAIXT FAIXT 2 27,6V 2 27,6V 2 27,6V 2 1,8A 0 C EPS PSU APS	Ренте Снита (зака) (за	EN54 Faire AUX 27,6V / 7A 7 1 0,0V 2 27,5V 2 3,2A
	AC EN54 229V FEAT BAT 27,6V V 27,6V T 26°C On 0	R FAILY: FAILY: FAILY: FAILY: 2 27,6V 2 27,6V 2 27,6V 2 1,8A 0	Preme Cause Helory It AC 230V Fear BAT U 27,7V T 26°C	EN54 Farmer 27,6V / 7A 1 0,0V 2 27,5V 2 2 3,2A 3,2A

Pulsar


Remote monitoring (options: Ethernet, RS485).

The PSU has been adjusted to operate in a system that requires a remote control of the parameters in a monitoring centre. Transmitting data concerning PSU status is possible due to an additional, external communication module responsible for communication in Ethernet or RS485 standard. Different connection topologies, presented later in this chapter, are only a part of possible communication schemes. More examples can be found in the manuals dedicated to individual interfaces.

ETHERNET network communication.


Communication in the Ethernet network is possible due to the additional interfaces: Ethernet "INTE" and RS485-ETH "INTRE", according to the IEEE802.3 standard.

The Ethernet "INTE" interface features full galvanic isolation and protection against surges. It should be mounted inside the enclosure of the PSU.

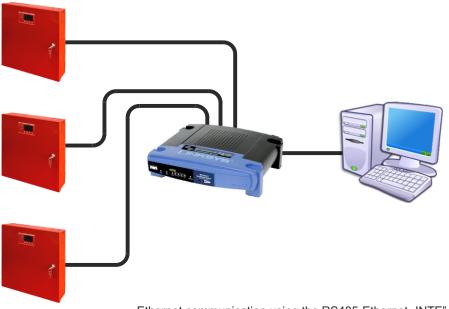

Ethernet communication using the RS485-Ethernet "INTE" interface.

The RS485-ETHERNET "INTRE" interface is a device used to convert signals between the RS485 bus and the Ethernet network. For proper operation, the unit requires an external power supply in the range of 10÷30 V DC e.g. drawn from a PSU of the EN54 series. The physical connection of the interface takes place under galvanic isolation. The unit is mounted in a hermetic enclosure protecting against adverse environmental conditions.

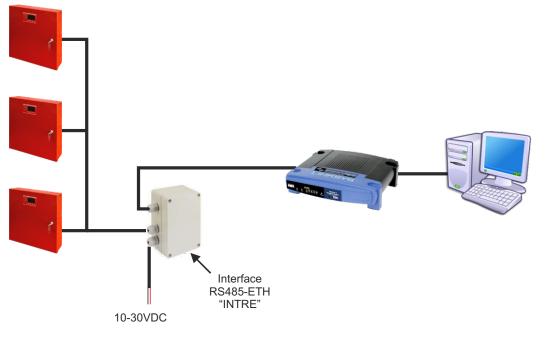


Ethernet communication using the RS485-Ethernet "INTRE" interface.




Fuse modules EN54-LB4 and EN54-LB8

Fuse modules EN54-LB4 and EN54-LB8 allow to connect 4 or 8 receivers to the PSU. Output state is indicated by green LEDs.

Blown fuse signal is transmitted to the input of collective failure EXTi (ALARM) and saved in the internal memory of PSU. The PSU's relay output can also be used for remote control, including external optical indication.

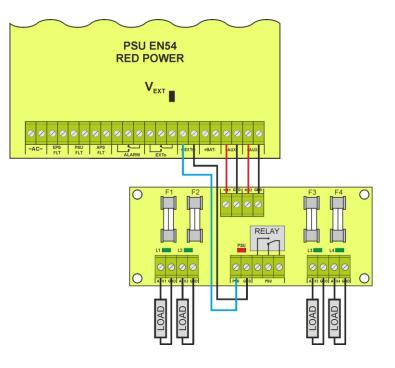

The connection of fuse module: EN54-LB4.

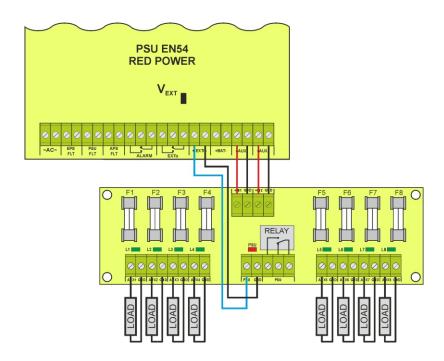

The connection of fuse module: EN54-LB8.